




Aktuell & INFO rmed

Issue No. 3
Volume 2010

ACCESSORIES

SILICONE MATERIAL 03H

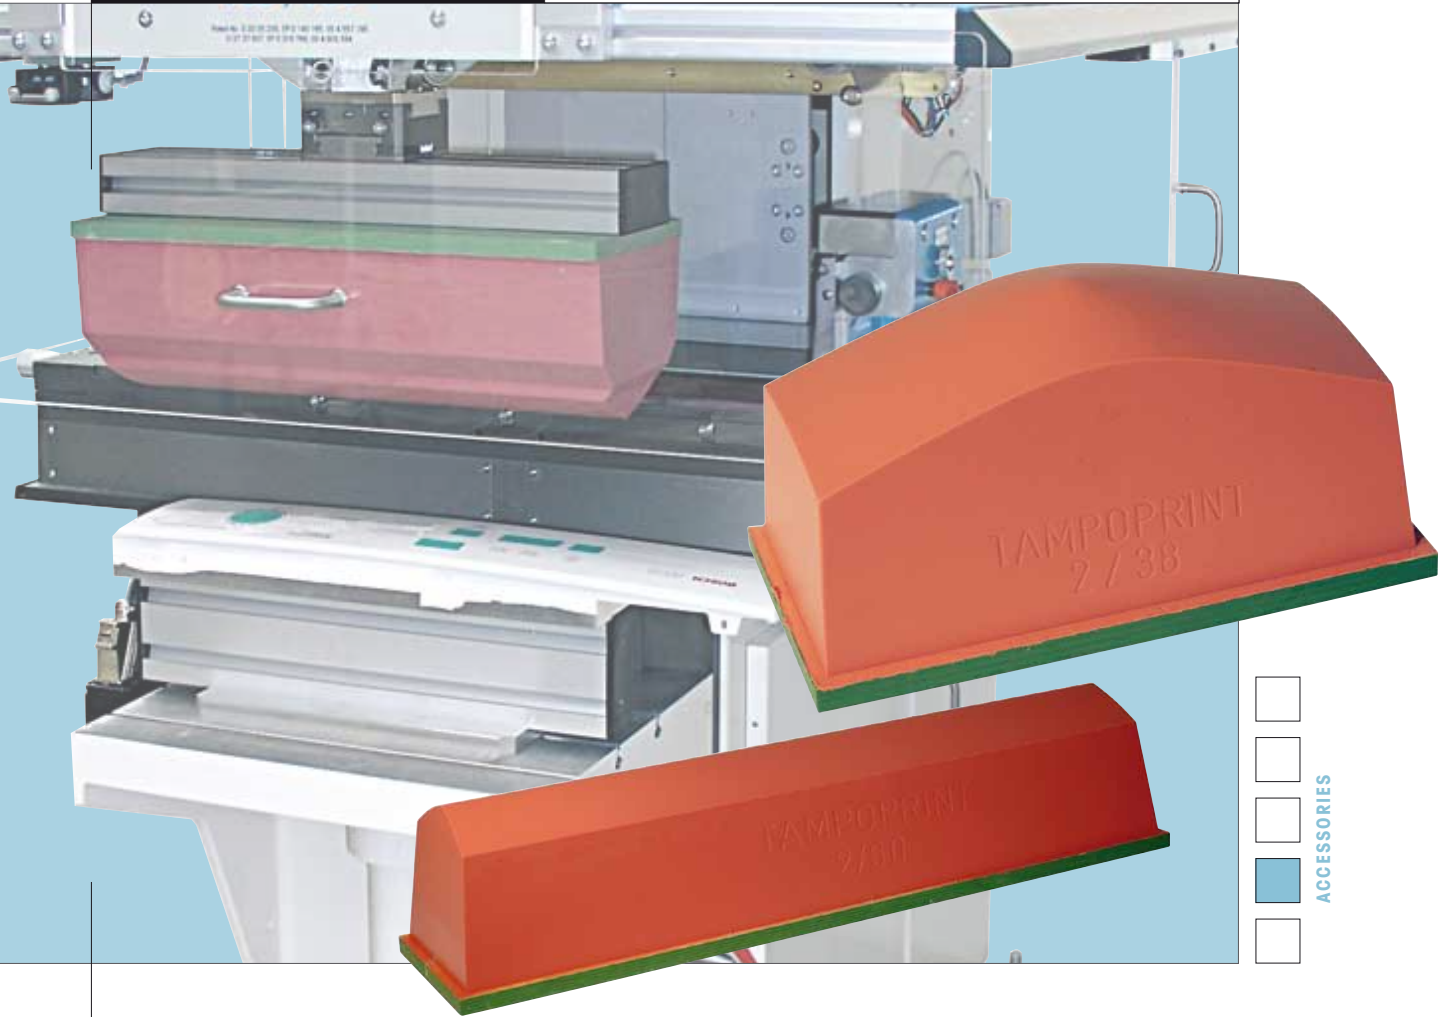

Tampon printing machine with less force of pressure needed ✓

Silicone material 03H with optimised swelling properties + mechanical lifetime ✓

Perfect for large tampon forms, strongly convex components ✓

technologies for your future
made in germany

ORIGINAL



Tampon printing machines
ALFALAS® Laser Systems
Automations


Advantages compared to the standard silicone material 03

- mechanical lifetime many times higher
- reduced swelling properties thanks to a more resistant outer skin
- 30-40% less effort for printing
- tampon printing machine with lower force of pressure necessary
- improved vibration properties

Silicone material "03H" - for large print images

Silicone material	03H (also available in "ST" super-dry)		
Mechanical capacity:	good	very good	very good
Primary use:	<ul style="list-style-type: none"> • for large print images or tampon forms • tampon printing machines with lower force of pressure 		
Swelling properties:	- very good -		
Available in hardness (Shore-A):	3	6	12

The higher the tampon hardness (Shore-A) the higher the mechanical capacity.

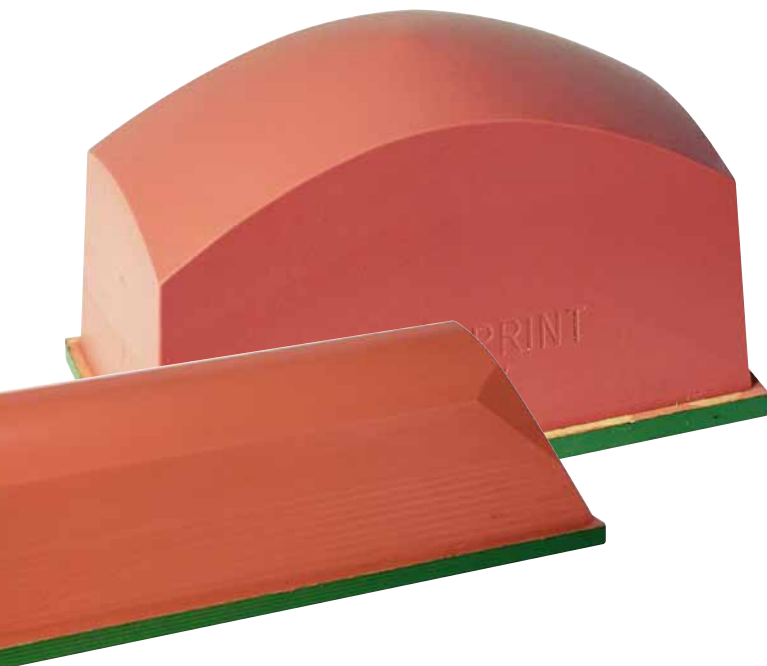

Dealer:



The reproduction of trademarks and brands used in this brochure, even if not explicitly expressed, does not justify the assumption that such names or symbols may be considered as free as defined by the Trademark Act and may therefore freely be used. The rights are the property of the respective owner.

TAMPOPRINT® products are permanently updated to keep pace with the latest technological developments. For this reason, figures and descriptions are non-binding. Our machines are manufactured based on the currently valid European Machinery Directives as well as the European product standards EN 1010 - 1 and EN 1010 - 2.

Subject to alterations! ©Copyright



Picture: Consumables for the care of your tampons

Tampon Care

- Unpack tampon immediately after delivery
- Store the tampon unwrapped 14-21 days (optimising the cross linking of the silicone material)
- Clean with tampon cleaner and non-fluffing cleaning wipes after printing.
- Before storage rub the tampon with Longlife oil.

Exception:

Silicone material "H" in version "ST" super-dry: do not rub in Longlife oil

- Remove dried ink residue during the printing process with adhesive foil (foil roll)

You can contact our sales team on:

Mon - Thurs: 7 am - 4 pm

Fri: 7 am - 12.30 pm

Fax: +49 7150 928-425

E-mail: tampon@tampprint.de



TAMPOPRINT® AG

Lingwiesenstraße 1
70825 Korntal-Münchingen, GERMANY

☎ +49 7150 928-0

Fax: +49 7150 928-400

E-Mail: info@tampprint.de

"Ventes et Affaires Françaises"

☎ +49 7150 928-144

Fax: +49 7150 928-432

E-Mail: ventes@tampprint.de

http: www.tampprint.de

TAMPOPRINT® INTERNATIONAL CORP.

1400 26th Street, Vero Beach, FL 32960, USA

☎ +1 772 778-8896, 800 810-8896

Fax: +1 772 778-8289

E-Mail: sales@tampprint.com

http: www.tampprint.com

TAMPOPRINT® IBERIA S.A.U.

c/Caspe 127-135 local B, 08013 Barcelona, SPAIN

☎ +34 93 2327161

Fax: +34 93 2471500

E-Mail: tampprint@tampprint.es

http: www.tampprint.es